
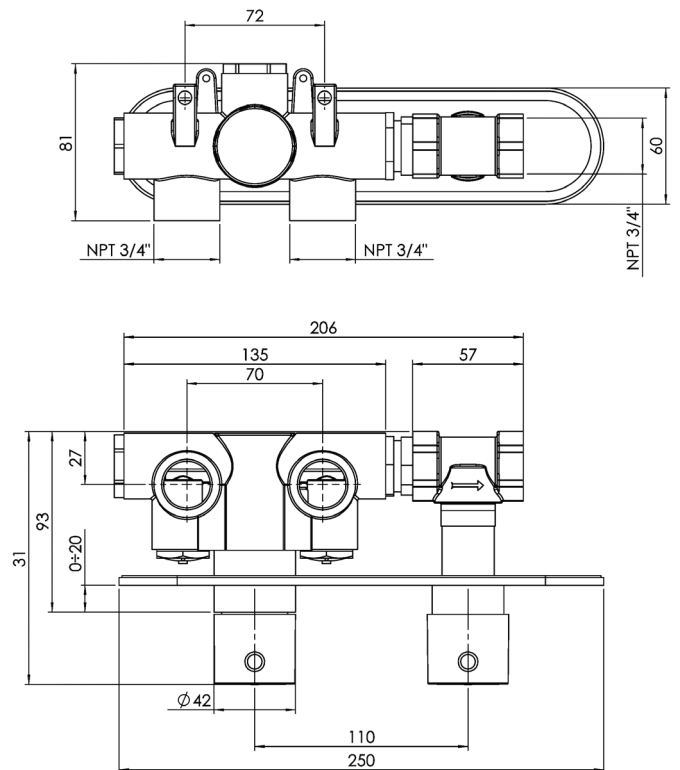


## 3 Sixty #36017RT

Trim for rough-in om012

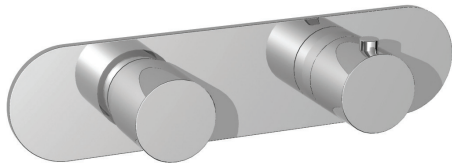

Order om012 rough-in separately  
9<sup>7/8</sup>" x 2<sup>3/8</sup>"

Finish: Chrome (#99)