
## **Ca Bano**

## **Century #63012RT**

Trim for rough-in om012

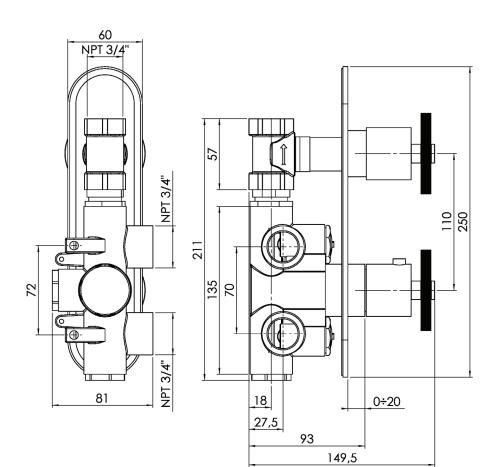



Order om012 rough-in separately 2<sup>3/8</sup>" x 9<sup>7/8</sup>"

Finish: Chrome (#99)