
## **Ca Bano**

## Century #63013RT

Trim for rough-in om013



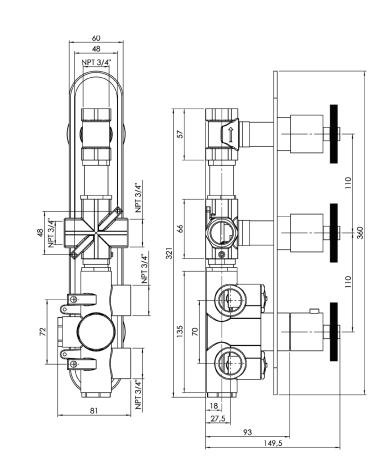

Order om013 rough-in separately 2<sup>3/8</sup>" x 14<sup>1/8</sup>"

Finish: Chrome (#99)