

## **Ca Bano**

## Program 1 #89012T

Trim for rough-in om012

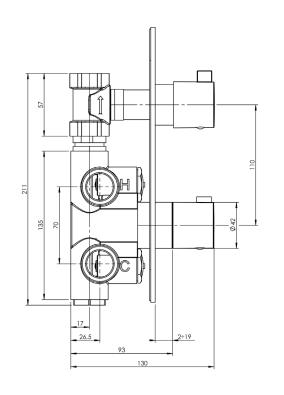

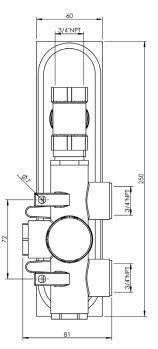



Order om012 rough-in separately 2<sup>3/8</sup>" x 9<sup>7/8</sup>"

Finish: Chrome (#99)