

## **Ca Bano**

## Program 1 #89018T

Trim for rough-in om013



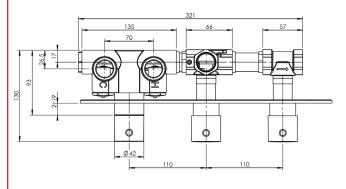

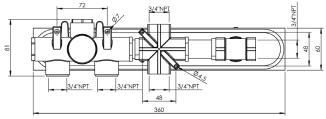

Order om013 rough-in separately 14<sup>1/8</sup>" x 2<sup>3/8</sup>"

Cabano cannot be held responsible for any technical or typographical errors or omissions contained within this document and reserves the right to make changes without prior notice.