
Last revision: 03/26/19





## **Arona #33031T**

Trim for rough-in om031





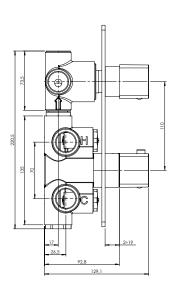



Order om031 rough-in separately 2<sup>5/8</sup>" x 9<sup>7/8</sup>"

Finish: Chrome (#99)