
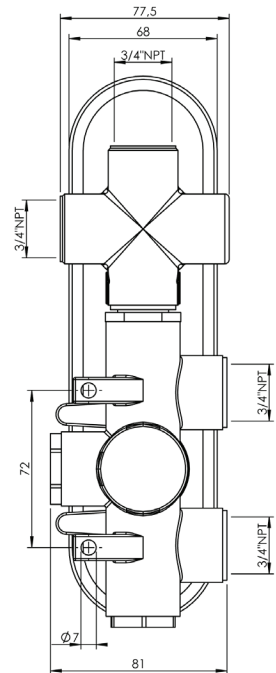


## Volex #47021RT

Trim for rough-in om021

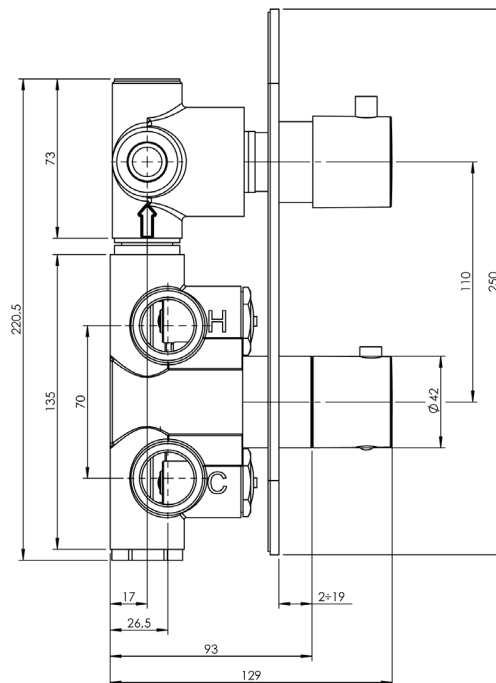

Order om021 rough-in separately  
2<sup>5</sup>/<sub>8</sub>" x 9<sup>7</sup>/<sub>8</sub>"

Finish: Chrome (#99)