
## **Ca Bano**

## Century #60031RT

Trim for rough-in om031

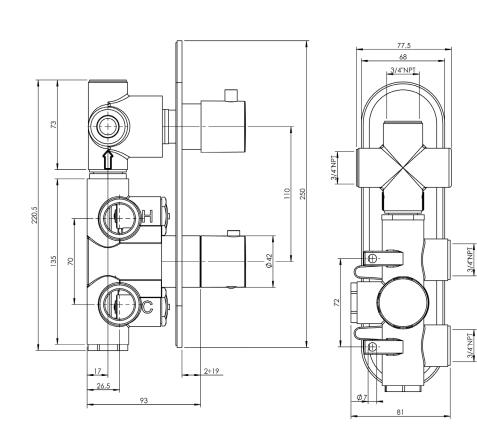



Order om031 rough-in separately  $2^{5/8"} \times 9^{7/8"}$ 

Finish: Chrome (#99)

Cabano cannot be held responsible for any technical or typographical errors or omissions contained within this document and reserves the right to make changes without prior notice.