


## **Century #63031RT**

Trim for rough-in om031

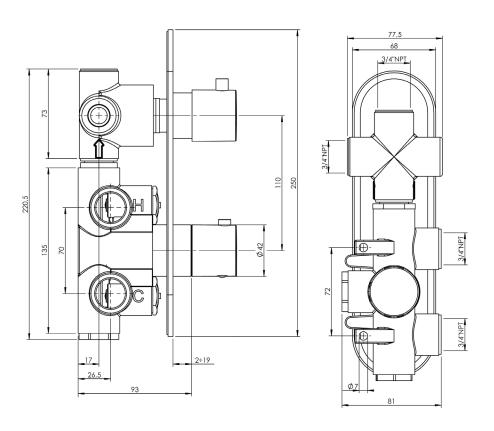



Order om031 rough-in separately 2<sup>5/8</sup>" x 9<sup>7/8</sup>"

Finish: Chrome (#99)